

# eXact® LEADQuick™

## 476 nm Photometer On-Site testing for Lead in Water, Soil, and Paint



Part # 486901



- Quick results with fewer steps
- Minimum interferences
- 3 ppb (µg/L) or .03 µg lead detection
- Accurate, reliable results
- Affordable (as little as \$2 per test)
- Uses patented technology (U.S. Patent 7333194)
- 2-Year warranty with satisfaction guarantee

PRODUCT	PART #	PRICE	WATERPROOF
eXact® LEADQuick™ Photometer	486900	\$299.99	☑️
Meter only for use with reagents sets below			
Carrying case with foam	486001	\$59.99	☑️

**Lead in WATER Screening Method:** Acid treat water sample; then fill the cell; next add buffer drops to sample and react the sample with TMPYP indicator (colorimetric reaction at 476nm) and measure Lead in WA1 MENU. Detect 3 to 300 µg/L (accuracy ± 4 µg/L or ± 4%) in 5 minutes.

PRODUCT	PART #	TESTS	PRICE
eXact® LEADQuick™ Lead in Water Test Kit	486900-W	25	\$399.99
Kit includes eXact® LEADQuick™ Photometer (486900), carrying case and reagents (486901)			
eXact® LEADQuick™ Lead in Water Reagent Set (For use with 486900)	486901	25	\$59.99
LEADQuick™ Lead in Water Reagent Set 10 mL for HACH® 488375	488375	25	\$79.99
For use with HACH® LeadTrak™ Colorimeter II and is replacement for HACH® LeadTrak™ #5870021 reagent set			
The HACH® Company, LeadTrak™ Pocket Colorimeter™ II and all other HACH® products trademarks, service marks, trade names, logos, domain names, URLs and icons ("Marks") appearing on this brochure, registered or not, are the property of HACH Company Inc., Loveland, CO., USA			

**Lead in SOIL Screening Method:** 5 Minute extraction of 0.14 grams of soil with 14% Nitric Acid Reagent; followed by a 1/4000 dilution or higher of extraction (this negates typical soil ion interferences); and test in SL2 MENU using eXact® LeadQuick™ system. Method screens soils on-site for Lead (Pb<sup>2+</sup>) from 10 to 100,000 mg/kg quickly and accurately.

PRODUCT	PART #	TESTS	PRICE
eXact® LEADQuick™ Lead in Soil Reagent Set (For use with 486900)	486902	25	\$69.99

**Lead in PAINT Screening Method:** ½" diameter core of paint is drilled (50mg) and sample is homogenized with Nitric acid; then diluted (1/5000) for analysis in PT3 MENU. This test kit was developed to test around the 1.0mg lead/cm<sup>2</sup> limit of lead in paint, which is identified as the regulated level of lead in paint in the US EPA Lead; Renovation, Repair, and Painting rule (40 CFR Part 745). Method allows on-site Lead determination in paint from 0.02 to 1.4 mg (or higher by additional dilution of sample) Lead per cm<sup>2</sup> with accuracy with LeadQuick meter or by visual method. Levels by meter can also be determined as %Lead from 0.02 to 70%. Some accessories must be purchased separately.

PRODUCT	PART #	TESTS	PRICE
eXact® LEADQuick™ Lead in Paint Reagent Set (For use with 486900)	486903	50	\$99.99
LEADQuick™ Lead in Paint Visual Test Kit (does not require 486900)	487925-V	25	\$49.99

**ABS MENU** (additional feature of #486900) allows you to prepare your own calibration curve for other Lead testing variations and applications by using Part. No. 486901



**Industrial Test Systems, Inc.**  
1875 Langston Street,  
Rock Hill, SC 29730-7314 USA  
Phone: (800) 861-9712, (803) 329-9712  
eMail: its@sensafe.com  
International: ITSEXP@sensafe.com

**ITS Europe, Ltd.**  
Unit B Stanley Court,  
Glenmore Business Park, Telford Rd.  
Churchfields Industrial Estate  
Salisbury, Wiltshire SP2 7GL UK  
Phone: +44 (0) 1722 329502  
eMail: sales@sensafe.com

# eXact® MICRO 8

## 638 nm Photometer On-Site testing for Ammonia, Cyanide, Phosphate and more



- Directly read: Ammonia, Cyanide, Iron (Fe<sup>2+</sup> or Total), Phosphate, Sulfate, Sulfide, and Transmission
- Tests for 17 total parameters (see chart below)
- Uses patented technology (U.S. Patent 7333194)
- 0.01 ppm (mg/L) resolution
- Count down and count up timer
- Waterproof meter (IP-67)
- Uses 60% less reagents than most 10mL sample tests
- Accurate, reliable results
- 20-Test memory for each menu (140 total)
- 2-Year warranty with satisfaction guarantee
- Total Iron test requires use of powder pillows

### eXact® MICRO 8 REAGENTS

No.	PARAMETER/PRODUCT	PART NUMBER	# OF TESTS	DETECTION RANGE	CHEMISTRY	RETAIL PRICE
	eXact® Micro 8 (meter only)	486800	N/A	N/A	N/A	\$269.99
	Carrying case with foam	486001	N/A	N/A	N/A	\$59.99
1	Ammonia	483343-M	25	0.03 - 1.5 ppm	Salicylate	\$10.99
2	Cyanide	486812	25	0.03 - 2.28 ppm	Isonicotinic/Barbituric Acid	\$24.99
3	Iron, Ferrous (Fe <sup>2+</sup> )	486631	50	0.03 - 3.8 ppm	TPTZ	\$17.99
4	Total Iron, TPTZ (Fe <sup>2+</sup> /Fe <sup>3+</sup> )	486650	50	0.03 - 3.8 ppm	TPTZ + PP	\$19.99
5	Phosphate	486814	50	0.03 - 2.40 ppm	Molybdate Method	\$12.99
6	Sulfate (as SO <sub>4</sub> ) <sup>*</sup>	486608	50	2 - 200 ppm	Barium (ppt)	\$15.99
7	Sulfide	486646	50	0.02 - 0.80 ppm	DPD Reagent / FeCl <sub>3</sub>	\$19.99
8	Transmission	N/A	N/A	N/A	N/A	N/A
9	Alkalinity, Total <sup>*</sup>	486816	50	20 - 180 ppm	Thymol Blue + Citrate	\$14.99
10	Biguanide <sup>*</sup>	486810	50	5 - 80 ppm	Bromothymol Blue	\$12.99
11	Calcium (as CaCO <sub>3</sub> ) <sup>*</sup>	486629	50	20 - 900 ppm	Oxalic Acid	\$14.99
12	Chloride (as NaCl) <sup>*</sup>	481657	25	3 - 300 ppm	Silver (ppt)	\$12.99
13	Cyanuric Acid <sup>*</sup>	481652	130	5 - 90 ppm	Melamine (ppt)	\$9.99
14	Magnesium	486813	50	0.2 - 20 ppm	Ammonium Phosphate (ppt)	\$12.99
15	pH <sup>*</sup>	486817	50	6.2 - 8.4 ppm	Thymol Blue	\$10.99
16	Potassium <sup>*</sup>	486621	50	1.0 - 10.0 ppm	Tetraphenylborate	\$12.99
17	Protein (as Albumin) <sup>*</sup>	486620	50	0.3 - 16.0 mg/L	Sulfosalicylic Acid	\$12.99
18	Turbidity <sup>*</sup>	None	No Reagent	3 - 580 NTU	Turbidity	N/A

\* Results utilize the Tr-7 (Transmission) meter function and require the use of a conversion table. See respective test procedures for more information and tables. For resellers and distributors products sold in case quantities (12 units per case). PRICES & SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE. ALL PRICES IN USD.

VISIT OUR WEBSITE - WWW.SENSAFE.COM FOR MORE DETAILS ON THIS PRODUCT

### Typical eXact® Micro Test Procedure:



# eXact® MICRO 7+

## 525 nm Photometer On-Site testing for Free, Total Chlorine and more

- Directly read: Alkalinity, Bromine, Calcium Hardness, Free Chlorine, Total Chlorine, Copper, Ozone, pH, Permanganate, and Transmission
- Tests for 36 total parameters (see chart below)
- Uses patented technologies (U.S. Patent 7333194, 7491546)
- 0.01 ppm (mg/L) resolution
- Built-in cell and countdown timer
- Waterproof meter (IP-67)
- Uses test strip DPD delivery method
- Uses 60% less reagents than most 10mL sample tests
- Accurate, reliable results
- 20-Test memory for each menu (140 total)
- Used in emergency disasters, humanitarian efforts and military operations
- 2-Year warranty with satisfaction guarantee



### eXact® MICRO 7+ REAGENTS

No.	PARAMETER/PRODUCT	PART NUMBER	# OF TESTS	DETECTION RANGE	CHEMISTRY	RETAIL PRICE
	eXact Micro 7+ Meter Kit	486691-K	N/A	N/A	N/A	\$349.99
	Kit Includes carrying case, meter and 25 tests of each: DPD-1 (Free Chlorine), DPD-3 (Total Chlorine), pH, Calcium Hardness, Total Alkalinity, Copper					
	eXact Micro 7+ Well Driller Kit	486691-WD	N/A	N/A	N/A	\$389.99
	Kit Includes carrying case, meter and 25 tests of each: DPD-1 (Free Chlorine), DPD-3 (Total Chlorine), pH, Calcium Hardness, Total Alkalinity, Copper, Iron, Manganese					
1	Alkalinity, Total	486641	100	20 - 180 ppm	Alizarin Red S + Citrate	\$14.99
2	Bromine (DPD-1)	486637	100	0.01 - 9.0 ppm	DPD	\$12.99
3	Calcium (as CaCO <sub>3</sub> )	486629	50	20 - 990 ppm	Oxalic Acid	\$14.99
4	Chlorine, Free (DPD-1)	486637	100	0.01 - 6.0 ppm	DPD	\$12.99
5	Chlorine, Total (DPD-3)**	486638	100	0.01 - 6.0 ppm	KI	\$7.99
6	Chlorine, Total (DPD-4)	486670	100	0.01 - 6.0 ppm	DPD + KI	\$14.99
7	Copper (Cu <sup>2+</sup> )	486632	50	0.04 - 8.0 ppm	Biquinoline	\$14.99
8	Ozone (DPD-4)	486670	100	0.01 - 10.0 ppm	DPD + KI	\$14.99
9	Permanganate (DPD-1)	486637	100	0.01 - 4.5 ppm	DPD	\$12.99
10	pH	486639	100	6.2 - 8.4	Phenol Red	\$10.99
11	Ammonia <sup>*</sup>	483343-M	25	0.03 - 5.8 ppm	Salicylate Method	\$10.99
12	Calcium (as NaCl) <sup>*</sup>	481657	25	3 - 285 ppm	Silver (ppt)	\$12.99
13	Chlorine Dioxide (DPD-1) <sup>*</sup>	486637	100	0.03 - 6.5 ppm	DPD	\$12.99
14	Chromium Hexavalent <sup>*</sup>	486614	50	0.02 - 7.0 ppm	Diphenylcarbazide	\$15.99
15	Cyanuric Acid <sup>*</sup>	481652	130	5 - 62 ppm	Melamine (ppt)	\$9.99
16	Fluoride <sup>*</sup>	486643	25	0.1 - 1.1 ppm	SPADNS	\$12.99
17	Hydrazine <sup>*</sup>	486649	50	1 - 2.0 ppm	4-Dimethylaminocinnamaldehyde	\$19.99
18	Hydrogen Peroxide LR <sup>*</sup>	486616	50	0.01 - 4 ppm	DPD + PO <sub>4</sub> + MO <sub>4</sub> + KI	\$19.99
19	Hydrogen Peroxide MR <sup>*</sup>	486648	50	0 - 42 ppm	DPD + MO <sub>4</sub> + KI + acid	\$19.99
20	Hydrogen Peroxide HR <sup>*</sup>	486670	100	10 - 1000 ppm	DPD + KI	\$14.99
21	Iodine (DPD-1) <sup>*</sup>	486637	100	0.01 - 10 ppm	DPD	\$12.99
22	Iron, Ferrous (Fe <sup>2+</sup> ) <sup>*</sup>	486631	50	0.03 - 3.8 ppm	TPTZ	\$17.99
23	Total Iron, TPTZ (Fe <sup>2+</sup> /Fe <sup>3+</sup> ) <sup>*</sup>	486650	50	0.03 - 3.8 ppm	TPTZ + PP	\$19.99
24	Total Iron, Ferro (Fe <sup>2+</sup> /Fe <sup>3+</sup> ) <sup>*</sup>	486651	50	0.05 - 3.5 ppm	1,10 Phenanthroline	\$17.99
25	LR Total Hardness (as CaCO <sub>3</sub> ) <sup>*</sup>	486630	100	2 - 77 ppm	Phthalein Purple	\$15.99
26	Magnesium <sup>*</sup>	486647	50	0 - 130 ppm	Ammonium Phosphate (ppt)	\$12.99
27	Manganese <sup>*</sup>	486606	24	0.03 - 1.5 ppm	PAN + Cyanide	\$29.99
28	Nitrate (as NO <sub>3</sub> ) <sup>*</sup>	486617	50	13 - 140 ppm	Zinc Reduction	\$18.99
29	Nitrite (as NO <sub>2</sub> ) <sup>*</sup>	486623	50	0.05 - 3.5 ppm	Chromotropic Acid	\$17.99
30	pH, Acid <sup>*</sup>	486624	50	3.0 - 6.2	Alizarin Red S	\$9.99
31	pH, Alkali <sup>*</sup>	486609	50	8.3 - 9.6	Thymol Blue	\$9.99
32	Potassium <sup>*</sup>	486621	50	1.0 - 10.0 ppm	Tetraphenylborate	\$12.99
33	Protein (as Albumin) <sup>*</sup>	486620	50	0.3 - 16.0 mg/L	Sulfosalicylic Acid	\$12.99
34	Sulfate <sup>*</sup>	486608	50	1 - 100 ppm	Barium (ppt)	\$12.99
35	Sulfide <sup>*</sup>	486646	50	0.1 - 13 ppm	NPS	\$19.99
36	Turbidity <sup>*</sup>	None	No Reagent	3 - 580 NTU	Turbidity	N/A

\* Results utilize the Tr-7 (Transmission) meter function and require the use of a conversion table. See respective test procedures for more information and tables. \*\* Total Chlorine DPD-3 Test requires Free Chlorine DPD-1 (486637) to be run first. For resellers and distributors - products sold in case quantities (12 units per case).

VISIT OUR WEBSITE - WWW.SENSAFE.COM FOR MORE DETAILS ON THIS PRODUCT




# Arsenic Compliance Testing

Five kits to choose from

- All tests verified through the USEPA/ETV program ([www.epa.gov/etv](http://www.epa.gov/etv))
- Used by International Aid Organizations
- Results in 14 minutes
- Safe, convenient reagents
- US Patent No. 6696300
- Arizona Point of Use Compliance Program Manual approved
- No technical experience required
- Detects as low as 0.3 ppb Arsenic

Quick™ Arsenic tests were developed with considerations for safety, sensitivity, ease-of-use, and speed. All reagents are in powder form and have been carefully selected to minimize the hazards associated with conventional arsenic testing. All components needed to accurately detect and measure arsenic are included in a portable ready-to-use kit. Choose the kit according to arsenic detection level required.

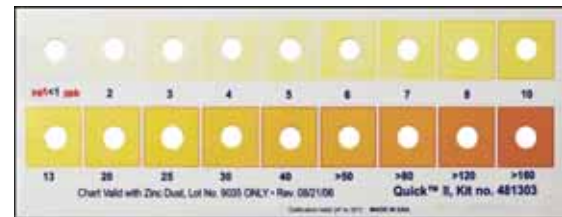

The matching Easy Read™ color chart is printed with extra large color blocks for quick and accurate color matching.

## Quick™ Arsenic Test Kits Available:

US Patent # 6696300

PRODUCT NAME (PART NUMBER)	NO. OF TESTS	OPTIMUM RANGE* ppb (µg/L)	TYPICAL COLOR CHART DETECTION LEVELS ppb (µg/L)	TYPICAL ACCURACY** OF DUPLICATES USING QUICK™ ARSENIC SCAN	PRICE IN US \$
Arsenic Quick™ Mini Kit (481396-5) (Can also be used for soil analysis.)	5	10 to 200	0, 5, 10, 20, 60, 100, 300, 500, >500, >>500	+/-18 ppb or +/-30%	\$25.99
Arsenic Quick™ II Mini Kit (481303-5)	5	3 to 20	<1, 2, 3, 4, 5, 6, 7, 8, 10, 13, 20, 25, 30, 40, >50, >80, >120, >160	+/-1.2 ppb or +/-16%	\$44.99
Arsenic Low Range Quick™ II Mini Kit (481301-5)	5	1 to 10	<0.5, 1, 1.5, 2, 3, 4, 5, 6, 7, 8, 12, >20, >30, >50	+/-0.8 ppb or +/-14%	\$54.99
Arsenic Ultra-Low Quick™ II Mini Kit (481300-5)	5	0.5 to 6	0, 0.3, 0.7, 1.0, 1.5, 2, 2.5, 3, 3.5, 4, 5, 6, 8, 10, 13, 20, >20	+/-0.4 ppb or +/-12%	\$69.99
Arsenic Quick™ Kit (481396) (Can also be used for soil analysis.)	100	10 to 200	5, 10, 20, 30, 40, 50, 60, 80, 100, 150, 200, 250, 300, 400, 500, >500	+/-18 ppb or +/-30%	\$169.99
Arsenic Low Range Quick™ (481297-1)	50	7 to 80	<2, 4, 10, 15, 20, 25, 30, 40, 50, 60, 70, 80, 100, >150, >300	+/-8 ppb or +/-25%	\$179.99
Arsenic Quick™ II (481303)	50	3 to 20	<1, 2, 3, 4, 5, 6, 7, 8, 10, 13, 20, 25, 30, 40, >50, >80, >120, >160	+/-1.2 ppb or +/-16%	\$219.99
Arsenic Low Range Quick™ II (481301)	50	1 to 10	<0.5, 1, 1.5, 2, 3, 4, 5, 6, 7, 8, 12, >20, >30, >50	+/-0.8 ppb or +/-14%	\$349.99
Arsenic Ultra-Low Quick™ II (481300)	25	0.5 to 6	0, 0.3, 0.7, 1.0, 1.5, 2, 2.5, 3, 3.5, 4, 5, 6, 8, 10, 13, 20, >20	+/-0.4 ppb or +/-12%	\$299.99
Quick™ Arsenic Scan Instrument (481305)	1 meter	N/A	0.01 to >1.00 color density ppb (µg/L) (as low as 0.2 ppb (µg/L) arsenic)	(see above)	\$1,599.99

Information on the performance characteristics of Quick™ can be found at [www.epa.gov/etv](http://www.epa.gov/etv), or call ITS at 1-800-861-9712 for a copy of the ETV verification report. The use of the ETV® Name or Logo does not imply approval or certification of this product nor does it make any explicit or implied warranties or guarantees as to product performance.

\*Range can be expanded by diluting the sample with Arsenic-free water.  
\*\*As with any test, actual results will fall within a range around the actual value. The Typical Accuracy listed is from data generated by a technician in our lab using the Quick™ Arsenic Scan Instrument measuring interference-free aqueous arsenic standards. NO expected accuracy is the larger of the two values listed. (Example using Quick™: if the mean is 40 ppb, then the typical accuracy is +/-18 ppb which is larger than +/-12 ppb (40 ppb x 30%).

# Patented Test Strip Technology

Water testing available only from ITS

## USEPA APPROVED FOR CHLORINE COMPLIANCE TESTING

- No instrument required
- Safe, non-hazardous, reliable
- Published in the 2007 U.S. Federal Register Vol 72, No. 47, Monday, March 12 p.11204, ITS Method D99-003
- 40 second results with 0.05 ppm detection
- Approved for use by most U.S. States
- No monochloramine interferences
- No chlorine bleach out even at 500 ppm
- Ideal for field and on-site testing
- Used in emergency disasters, humanitarian efforts and military operations

**Detection Levels** 0, 0.05, 0.1, 0.2, 0.4, 0.6, 0.8, 1.2, 1.5, 2.0, 2.6, 4.0, >6.0 ppm (mg/L)

Part No.	Product Description	Price
481026	SenSafe™ Free Chlorine Water Check-50 Tests	\$17.99
481126	30 Individually-Wrapped Tests	\$17.99

"Indicator develops blue in Free Chlorine presence"

US Patent numbers 5491094 & 6541269

**USEPA APPROVED FREE CHLORINE**  
(US Patents 6541269, 5491064)

## DPD CHLORINE TESTING

### DPD-1 AND DPD-4 EXACT® STRIP REAGENTS

- DPD testing as specified in 4500-CL G, ISO & DIN
- No undissolved solids when testing cold (5°C) water
- 20 second test methodology (US Patented)
- Safe, immobilized chemistry
- Replaces tablets, powders and liquids
- Works in most 10mL DPD meter/kit
- Replacement for HACH® DPD Free Chlorine 10 mL # 2105569
- Replacement for HACH® DPD Total Chlorine 10 mL # 2105669

**Detection Levels** 0.00-6.0 (ppm)

Part No.	Product Description	Price
481647	DPD-1 eXact® Strip 50 Tests	\$8.49
481647-600	DPD-1 eXact® Strip 600 Tests	\$59.99 (only 10¢ a test)
481670	DPD-4 eXact® Strip 50 Tests	\$9.99
481670-600	DPD-4 eXact® Strip 600 Tests	\$74.99 (only 12.5¢ a test)

**ONLY 10¢ PER TEST!**

**USEPA DIN ISO COMPLIANT FOR FREE AND TOTAL CHLORINE**  
(4500-CL G, DIN STANDARD 38 403 G4, ISO 7383/2)

## WATER METALS TESTING

### SENSAFE™ WATER METALS CHECK

Tests for all of these metals: Cadmium, Cobalt, Copper, Iron, Lead, Mercury, Nickel, Zinc and all other +2 valence hazardous metals

- Test detects trace amounts of metals in tap water
- Charcoal filtered, RO and bottled water confirms effective metal removal by reading <10 ppb; a better alternative to TDS demonstrations
- Safe and non-hazardous test
- Results in 2 ½ minutes
- Lowest detection of any test strip

**Detection Levels** <10, 20, 50, 100, 200, 400, 1000 ppb (µg/L)

Part No.	Product Description	Price
480309	Water Metals Check - 50 Tests	\$19.99
480309-6	Water Metals Check - 6 Tests	\$4.99

"Indicator develops red in presence of metals, yellow indicates no metal"

US Patent number 6541269

## \*Patented Test Strip Technology

Bromine	Part No.	Tests	Description / Detection Levels	Price
Bromine Check*	480001	50	Method A: 0, 0.5, 1.0, 2.0, 3.0, 4.0, 5.0 ppm (mg/L) Method B: 0.00, 0.05, 0.10, 0.25, 0.50, 0.75 ppm (mg/L)	\$15.99
<b>Bacteria</b>				
Bacteria Check	481197	12	48 hour Presence / Absence of total coliforms for 100mL sample	\$59.99
EZ Coliform Cult *NEW*	487197	12	24 hour Presence / Absence coliform w/ fluorescent <i>E. coli</i> confirmation	\$99.99
18-Minute Bacteria	487999	2	18 minutes presence / absence bacteria test at 1000 cfu/mL	\$19.99
<b>Chloride</b>				
Chloride Check	481027	50	0, 50, 100, 250, 500 ppm (mg/L)	\$16.99
<b>Chlorine Dioxide</b>				
Chlorine Dioxide LR *	481028	50	Method A: 0, 0.1, 0.2, 0.4, 0.6, 0.8, 1.1, 1.2, 1.4, 1.6 ppm (mg/L) Method B: 0.00, 0.05, 0.1, 0.15, 0.2, 0.3 ppm (mg/L)	\$15.99
Chlorine Dioxide	480031	50	0.5, 2, 5, 10, 25, 50, 100 ppm (mg/L)	\$15.99
<b>Free Chlorine</b>				
Free Chlorine *	480002	50	Method A: 0.0, 1.0, 2.0, 3.0, 4.0, 5.0, 6.0, 7.0 ppm (mg/L) Method B: 0.0, 0.05, 0.1, 0.2, 0.4, 0.6, 0.8, 1.2 ppm (mg/L)	\$15.99
Free Chlorine Check *	480023	50	0, 0.25, 0.5, 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 15, 20, 25 ppm (mg/L)	\$15.99
Free Chlorine Water Check (EPA) *	481026	50	0.0, 0.05, 0.1, 0.2, 0.4, 0.6, 0.8, 1.2, 1.5, 2.0, 2.6, 4.0, >6.0 ppm (mg/L)	\$17.99
Free Chlorine Sanitizer Check	481130	30	0, 1, 3, 5, 10, 12, 15, 20, 40, 80 ppm (mg/L)	\$13.99
Free Chlorine High Range	480022	50	0, 1, 2, 5, 10, 20, 40, 80, 120 ppm (mg/L)	\$13.99
Free Chlorine Check Ultra High	480024	50	0, 25, 50, 100, 200, 300, 400, 500, 750 ppm (mg/L)	\$13.99
Free Chlorine Check Ultra High II	480124	50	0, 25, 50, 200, 500, 800, 1100, 1500, 2000 ppm (mg/L)	\$13.99
<b>Total Chlorine</b>				
Total Chlorine *	480010	50	Method A: 0.0, 0.1, 0.2, 0.5, 0.8, 4.0, 10.0 ppm (mg/L) Method B: 0.0, 0.05, 0.1, 0.15, 0.2, 0.5, 0.8, 1.0, 4.0, 10.0 ppm (mg/L)	\$15.99
Ultra Low Total Chlorine *	480007	30	Method A: 0.0, 0.01, 0.02, 0.05, 0.1, 0.15, 0.2 ppm (mg/L) Method B: 0.0, 0.005, 0.01, 0.015, 0.02, 0.025, 0.05 ppm (mg/L)	\$24.99
Total Chlorine High Range	480033	50	0, 5, 10, 20, 30, 40, 60, 80 ppm (mg/L)	\$13.99
Free & Total Chlorine *	480655	30	0, 0.1, 0.2, 0.5, 1.0, 2.5, 5.0 ppm (mg/L)	\$17.99
<b>Hydrogen Peroxide</b>				
Peroxide Check™ (H <sub>2</sub> O <sub>2</sub> )	480014	50	0, 0.5, 2.0, 5.0, 10, 25, 50, 100 ppm (mg/L)	\$12.99
Peroxide Check™, Low Range *	481015	50	0.05, 0.3, 0.5, 1.0, 2.0, 4.0 ppm (mg/L)	\$18.99
Peroxide Check™, High Range *	481116	30	0, 200, 400, 800, 1600, 2500, 5000, 10000, 30000 ppm (mg/L)	\$15.99
<b>Hydrogen Sulfide</b>				
Hydrogen Sulfide Low Range	481197-20	30	0, 0.3, 0.5, 1.0, 2.0 ppm (mg/L)	\$15.99
Hydrogen Sulfide	481197-1	50	0, 5, 10, 20, 30, 40, 50, 60, 80 ppm (mg/L)	\$13.99
Hydrogen Sulfide Ultra-Low	481201	50	Method A: <0.005, 0.01, 0.02, 0.03, 0.05, 0.075, 0.1, 0.2 Method B: <0.05, 0.05, 0.075, 0.1, 0.2, 0.25, 0.3, 1.0 ppm (mg/L)	\$49.99
<b>Iodine</b>				
Iodine *	480018	50	Method A: 0.0, 0.5, 1.0, 2.0, 3.0, 4.0, 5.0 Method B: 0.0, 0.02, 0.05, 0.10, 0.20, 0.30, 0.40, 0.5, 1.0, 2.0, 3.0, 4.0, 5.0 ppm (mg/L)	\$15.99
Iodine Check High	480064	50	0, 5, 10, 15, 20, 30, 40, 50, 75, 100, 150, 200, 250, 300 ppm (mg/L)	\$13.99
<b>Metals</b>				
Chromium (chromate)	480047	50	<0.1, 0.25, 0.5, 1, 2.5, 5, 10, 25, 50 ppm (mg/L) as Chromium	\$15.99
Copper, (Cu+1/Cu+2)	480011	25	0, 0.5, 1.0, 2.0, 5.0 ppm (mg/L)	\$13.99
Copper, John's (Cu+1/Cu+2) *	480042	25	0, 0.05, 0.1, 0.2, 0.4, 1, 2 ppm (mg/L)	\$13.99
Iron, Ida's (Fe+2) *	481046	25	Method A: 0.0, 0.3, 1.0, 2.0, 5.0, 10, 20, 50 ppm (mg/L) Method B: 0.0, 0.005, 0.01, 0.03, 0.06, 0.1, 0.3 ppm (mg/L)	\$13.99
Iron Check, (Fe+2/Fe+3) *	480025	25	0, 0.02, 0.05, 0.1, 0.2, 0.3, 0.5, 0.75, 1.0, 2.0, 5.0 ppm (mg/L)	\$13.99
Lead, (Pb+2) (Requires Meter)	488375	25	3 to 600 ppb (µg/L)	\$69.99
Manganese Check (as Mn) *	481020	24	<0.02, 0.05, 0.1, 0.2, 0.4, 1.0, >1.6 ppm (mg/L)	\$29.99
Mercury Check *	480048	50	<50, 50, 100, 200, 500, 1,000 ppb (µg/L)	\$19.99
Mercury, Boris' *	480049	50	0, 0.002, 0.005, 0.01, 0.02, 0.04, 0.08 ppm (mg/L)	\$19.99
Silver Check II, High Range	480045	50	50, 100, 250, 500, 1000 ppb (µg/L)	\$19.99
Silver, Boris' w/btl Glycine *	480044	50	0, 0.005, 0.01, 0.025, 0.05, 0.075, 0.1 ppm (mg/L)	\$39.99
Water Metals Check *	480309	50	<10, 20, 50, 100, 200, 400, 1000 ppb (µg/L)	\$19.99
Zinc	480026	50	0, 2, 5, 10, 20, 40, 100 ppm (mg/L)	\$15.99
<b>Nitrate/Nitrite</b>				
Nitrate and Nitrite	480009	50	NO3: 0, 0.5, 2, 5, 10, 20, 50 NO2: 0.15, 0.3, 1, 1.5, 3, 10 ppm (mg/L)	\$15.99
<b>Ozone</b>				
Ozone Check *	481234	50	0, 0.05, 0.1, 0.2, 0.3, 0.4, >0.5 ppm (mg/L)	\$19.99
<b>Total Hardness</b>				
Total Hardness	480008	50	0, 40, 80, 120, 180, 250, 425, 1000 ppm (mg/L) OR: 0, 2, 5, 7, 11, 15, 25, 58 gpg	\$8.99
<b>pH</b>				
Extended Range pH Check	481104	50	2, 3, 4, 5, 6, 6.5, 7, 7.5, 8, 8.5, 9, 9.5, 10, 11, 12	\$9.99
pH / Total Alkalinity	480005	50	pH: 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0 TA: 0, 40, 80, 120, 180, 240, 360 ppm (mg/L)	\$10.99



VISIT OUR WEBSITE - [WWW.SENSAFE.COM](http://WWW.SENSAFE.COM)  
FOR MORE DETAILS ON OUR PRODUCTS

PRICES ARE SUBJECT TO CHANGE.