



POOL CHECK™

eXact™ Advanced Pool & Spa Testing

The portable Pool Check™ eXact™ 3 meter is designed to give you the same quality results as your local pool & spa store. This advanced testing meter combines safety, accuracy, and ease-of-use in a small, hand-held package. Case and 9 volt battery included. 30 day money back guarantee!

Pool Check™ eXact™ 3 gives direct results for:
Free Chlorine, Total Chlorine, pH and Cyanuric Acid

Pool Check™ eXact™ 3

- X Uses DPD for Free Chlorine And Total Chlorine, Which Meets Health Department Requirements**
- X Affordable**
- X Uses eXactStrip™ Technology**
- X 0.1ppm Resolution**
- X Fast, Accurate Results**

Available For Private Label.

Test Procedure - Free Chlorine Example

Step 1:

Remove one eXact™ strip Cl from the bottle. Recap the bottle immediately. **Set strip in a dry place.**

Step 2:

Rinse supplied plastic vial 1 -2 times and fill to line with pool water sample. **DO NOT OVERFILL!** Dry outside of vial with a soft paper or cloth towel.



Step 3:

Lift the chamber lid and insert plastic vial. Close lid.



Step 4:

Press the "Menu" key to switch on. The "Cl" symbol will appear.



Step 5:

Press the "B" key to blank the meter to 0.



Step 6:

Open the chamber lid and dip the eXact™ Strip Cl into the plastic vial for 20 seconds with back and forth motion as illustrated.



Step 7:

Remove and discard the strip.



Step 8:

Close the lid and push the "R" key. Read the display for Chlorine in ppm (parts per million). Record your results.

POOL

CHECK™

eXact™


Advanced Pool & Spa Testing

DIGITAL POOL & SPA TESTING

Packaging:

eXact™ 3 Meter Kit - 481645

Kit includes eXact™ meter, carry case, instructions, 2 plastic vials, eXact™ Strips (US Patent Pending), and 9 volt battery.

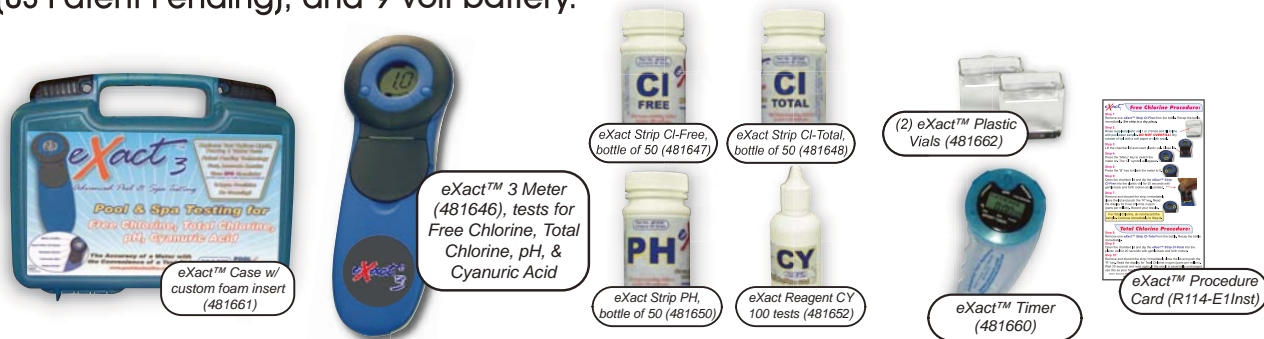

eXact™ 3 (Meter Only) - 481646

Also Available:

Meters

eXact™ 1 Meter Kit - 481641 - *Tests for Cl, pH, Alk* - Comes with meter, case, instructions, 9 volt battery, eXact Strip™ Cl Free, Cl Total, pH, Alk (50 strips each)

eXact™ 2 Meter Kit - 481643 - *Tests for Cl, Br, pH* - Comes with meter, case, instructions, 9 volt battery, eXact Strip™ Cl Free, Cl Total, pH, Br (50 strips each)

eXact™ 9 Meter Kit - SP370 - *Tests for 9 parameters: free chlorine, total chlorine, pH, alkalinity, bromine, ozone, copper, cyanuric acid and calcium hardness* - Comes with meter, case, instructions, 9 volt battery, and bottle of 50 eXact Strip™ for each parameter except for cyanuric acid (100 tests) and Calcium Hardness (100 Tests)

eXact Strips and Tests

- eXact™ Strip CL - 50 Tests - 481647
- eXact™ Strip Total Cl - 50 Tests - 481648
- eXact™ Strip Br - 50 Tests - 481649
- eXact™ Strip pH Type B - 50 Tests - 481655
(Use only with eXact™ 9)
- eXact™ Strip pH Type A - 50 Tests - 481650
(Use only with eXact™ 1,2,3)
- eXact™ Strip Total Alkalinity - 50 Tests - 481651
- eXact™ Strip Ozone - 50 Tests - 481653
- eXact™ Strip Copper - 50 Tests - 481654
- eXact™ Reagent CY - 100 Tests - 481652
- Calcium Hardness Tablets - 50 Tests - PM252
(Use only with eXact™ 9)



INDUSTRIAL TEST SYSTEMS, Inc.

1875 Langston Street, Rock Hill, SC 29730

Phone: 1-800-861-9712 Fax: 1-803-329-9743

For International: 001-803-329-9712 ext 220 (Pablo)

Web: www.poolcheckonline.com Email: its@cetlink.net

Member of



The Association of Pool & Spa Professionals